

POINT "A" SHOULD BE HIGHER THAN POINT "B"

WEDGE LOOSE STRAW BETWEEN BALES - SEE NOTE


PROPER PLACEMENT OF STRAW BALE BARRIER IN DRAINAGE WAY

ANCHOR FIRST STAKE TOWARDS PREVIOUSLY LAID BALE

WIRE TIE

2 REBARS STEEL PICKETS OR 2"x2" STAKES 18" TO 24" IN THE GROUND

WIRE TIES ON BALE

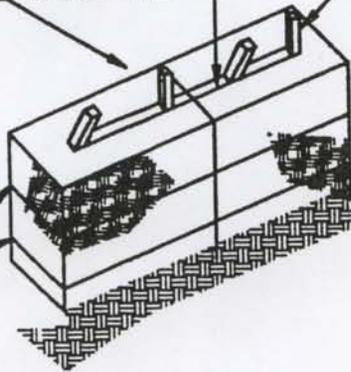

STRAW AND HAY BALE BARRIER

N.T.S.

NOTE:
WEDGE A FLAT SHOVEL OR PICK BETWEEN THE BALES AND MIX THE STRAW TOGETHER TO PREVENT THE WATER FROM FLOWING FREELY BETWEEN THE BALES.

TOWN OF FRIDAY HARBOR			
STRAW AND HAY BALE BARRIERS - SCHEMATIC			
APPROVED: <i>C. King</i> TOWN ADMINISTRATOR			DWG. NO. 5-28
DATE: 1/16/97		DRWN: L.T.	CHKD: T.N.
			SCALE: NO SCALE